

A14 INSTALLATION INSTRUCTIONS

Centor Australia Pty Ltd
1300 CENTOR
mail@centor.com.au
www.centor.com.au

Centor Europe Ltd
+44 121 701 2500
mail@centor.eu
www.centor.eu

Centor North America Inc.
toll free 866-255-0008
mail@centorarchitectural.com
www.centorarchitectural.com



Before starting any installation, ensure the head (lintel) is sufficiently strong and rigid to support the door in all positions. For side fix, the head and jambs should be plumb and flush. For head fix, the head must be square to the jambs and horizontally level.

Fit track to head for brackets and fixing centres. If using 40FG or 3G guide, cut 26 x 5mm groove in door.

Installing carriers with door plate


- 1 Drill 19mm holes each end on door top rail as illustrated. Fix door plate to top of door. Align centre of plate with centre of track allowing door clearance off head. The carrier plate is not always on the centre-line of the door and can be offset sideways (for wider doors).
- 2 Fix 14AS angle stop on same centre-line as door plate.
- 3 Insert carriers and track stops into the track.
- 4 Lift the door up to the track and engage 1AN adjusting star nut into the door plate. Adjust vertically for floor clearance. Lock flanged nut onto door plate.
- 5 Floor guide or channel should be fitted so that door hangs vertically below the centre-line of the track.
- 6 Align track stops to retain door at each end.
- 7 Finish by fitting Flush Pulls, Dropbolts and Pelmet.

Alternate installation for carriers with bolt only


- 1 Prepare 19 x 10mm slots in top rail. Use these slots for sideways alignment off wall after hanging door.
- 2 Fix 14AS angle stop on same centre-line as carrier bolt.
- 3 Insert carriers and track stops into the track.
- 4 Lift the door onto bolts and adjust vertically for floor clearance. Lock flanged nut onto door frame.
- 5 Floor guide or channel should be fitted so that door hangs vertically below the centre-line of the track.
- 6 Align track stops to retain door at each end.
- 7 Finish by fitting Flush Pulls, Dropbolts and Pelmet.

For either method, check guides do not project past end of door at each end of travel. If necessary, adjust the track stops. Lubricate track regularly with grease.


HEAD FIX ALUMINIUM TRACK

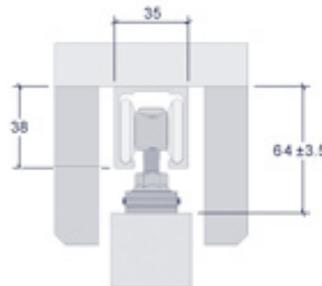


SIDE FIX

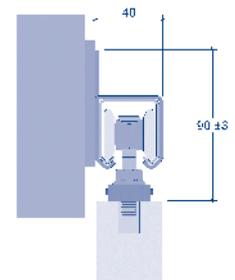


WOODEN FRAMED DOOR

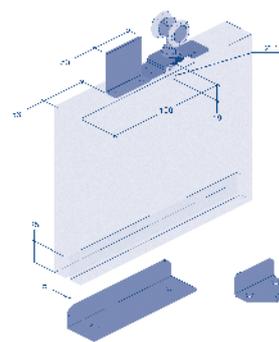

METAL FRAMED DOOR

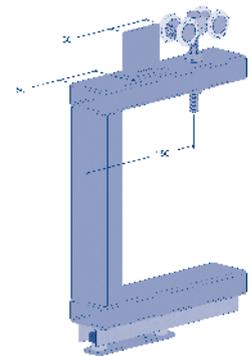


NON-GROVED DOOR WITH UNIVERSAL GUIDE

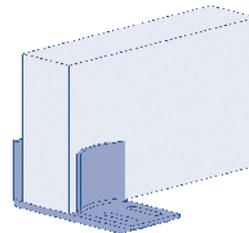


GUIDE OPTIONS

ROLLER GUIDE

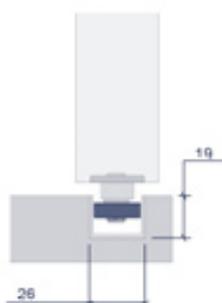

GROOVED GUIDE

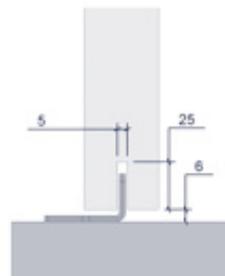

TIMBER DOOR WITH DOUBLE ROLLER GUIDE

