

S1 Screen

ASSEMBLY INSTRUCTIONS


Centor Australia Pty Ltd
1300 CENTOR
mail@centor.com.au
www.centorhardware.com

centor®


S1E KIT




INITIAL UNPACKING

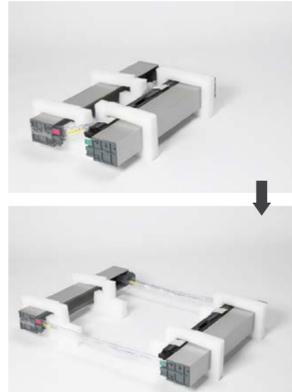



Ensure jamb
tongues are facing
each other

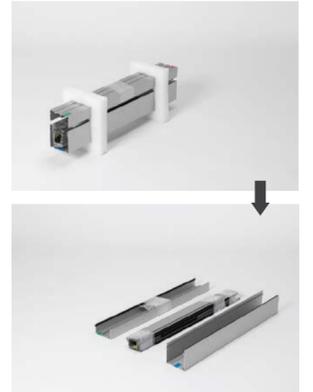


ATTACH HEAD

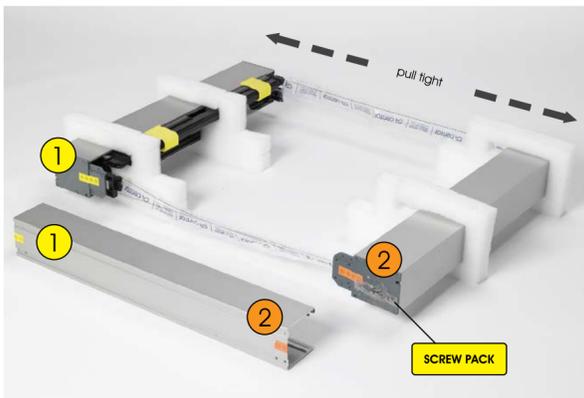



ATTACH SILL

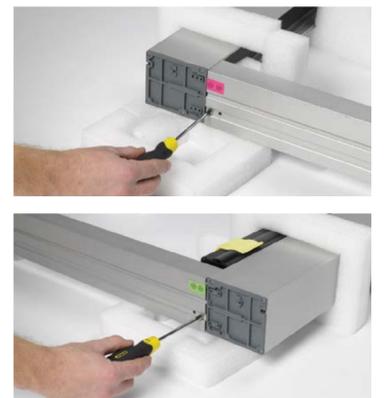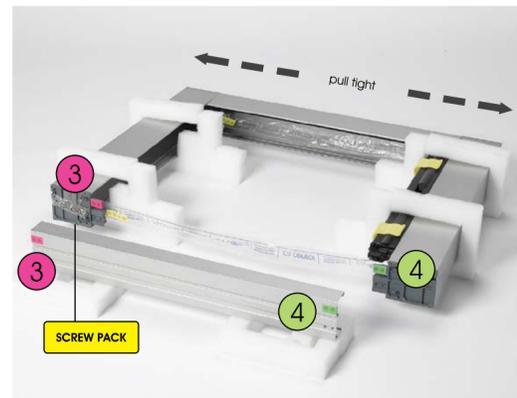

STAND UP & SQUARE UP FRAME IN OPENING

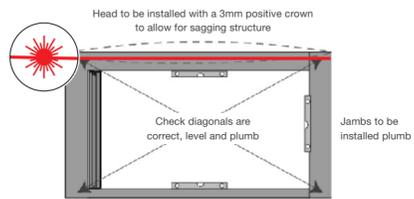

FIXING OFF THE SCREEN

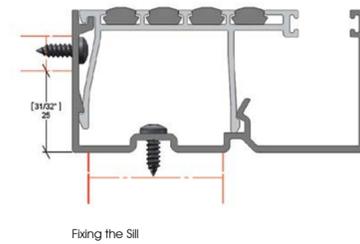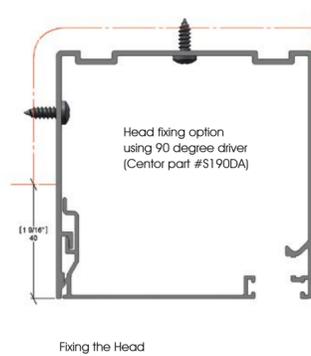


SCREW FIXINGS IN RED AREA ONLY



APPLY TENSION






REMOVE FINAL PACKAGING

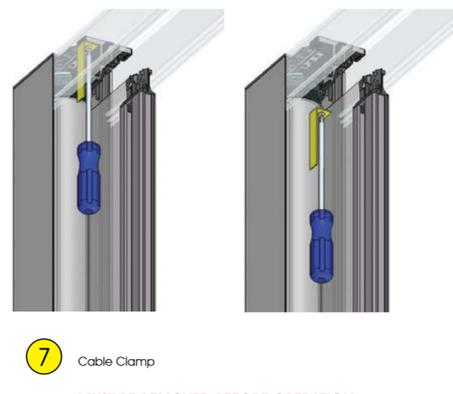

OPERATE SCREEN



LATERAL ADJUSTMENT IF NECESSARY

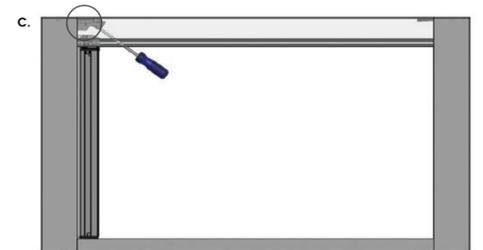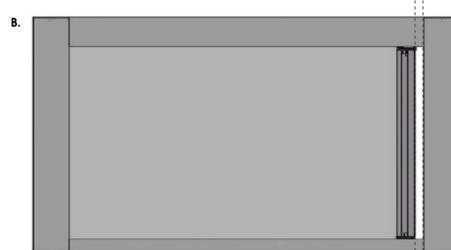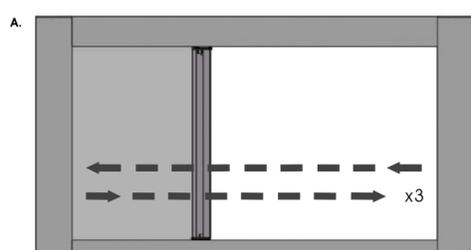


Repeat steps A, B and C until stile and jamb are parallel


FITTING COVERS




SILL COVER

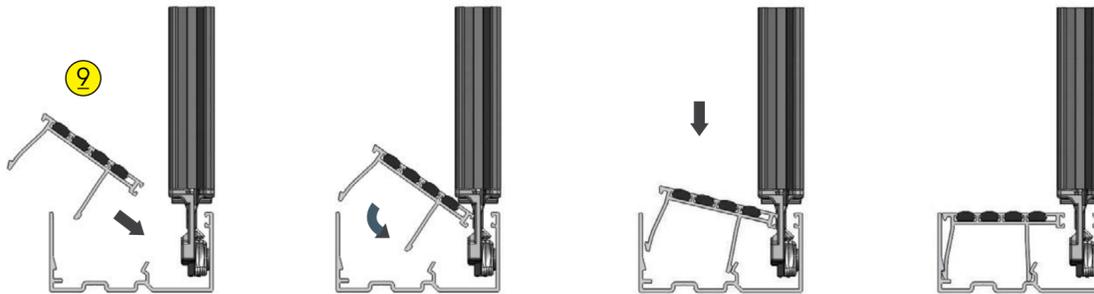


JAMB STOP (SINGLE SCREEN ONLY)

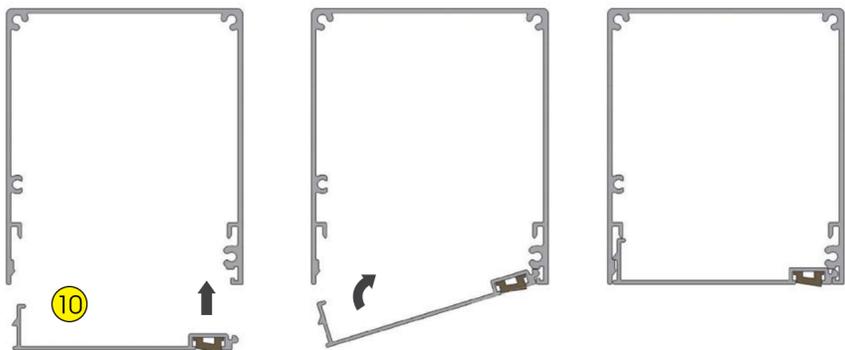


JAMB COVERS

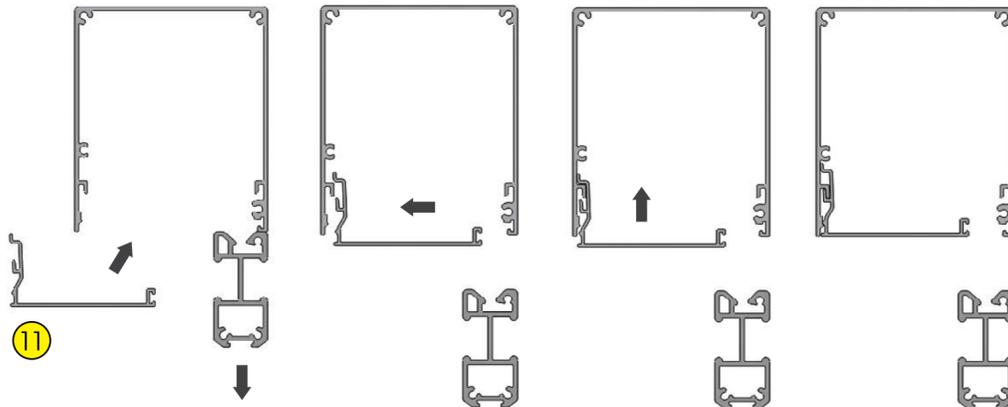


HEAD COVERS

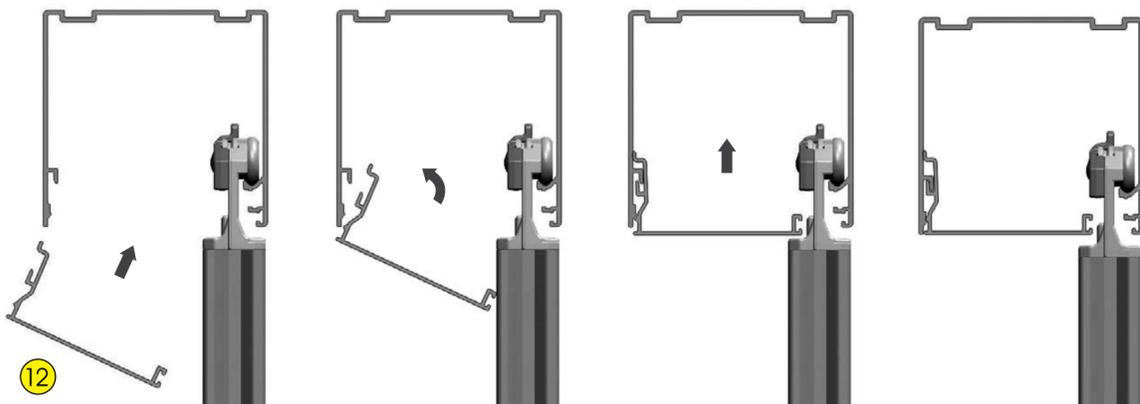

STILE COVERS

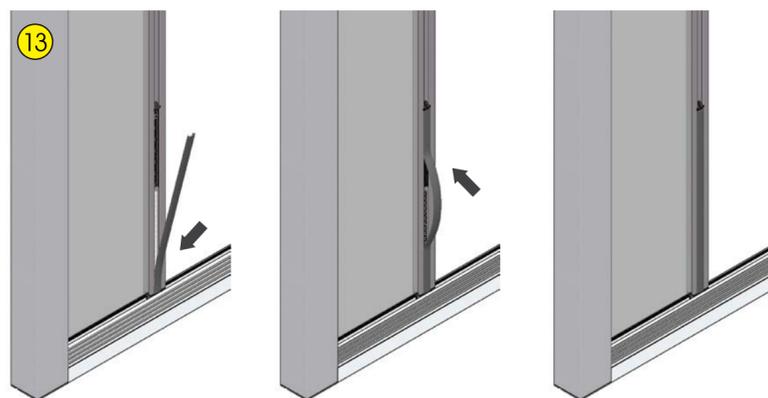


DOOR STOP (DOUBLE SCREEN ONLY)

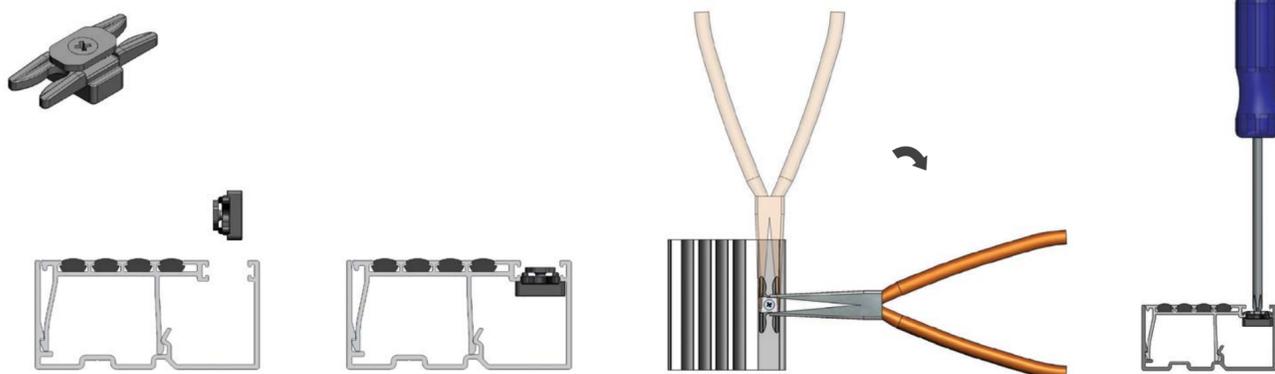

SILL GAP SEAL (OPTIONAL)



HEAD/JAMB COVER REMOVAL

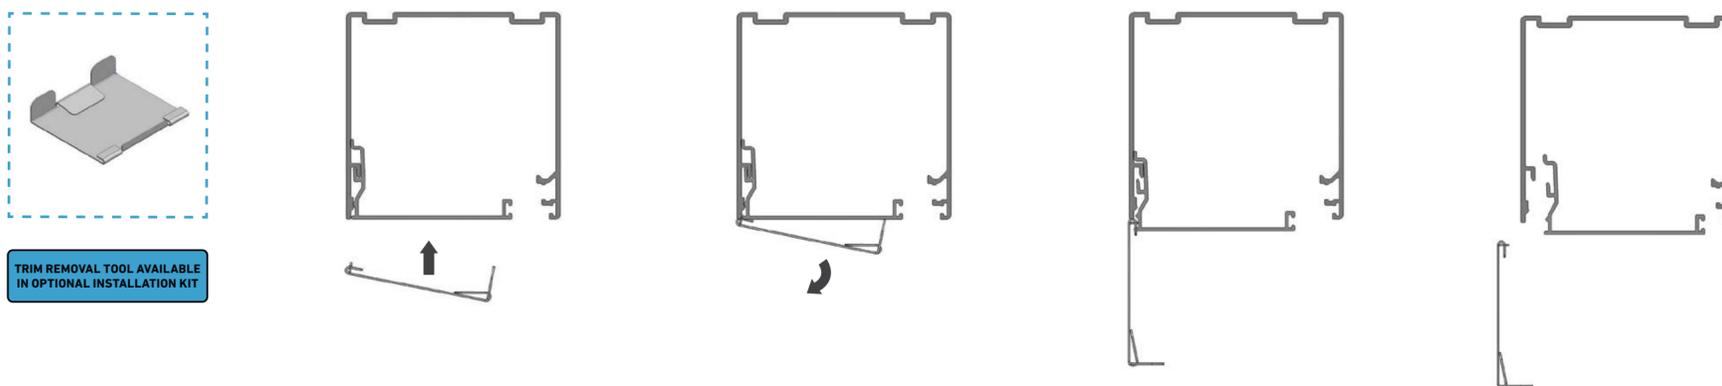

SILL COVER REMOVAL

