Centor Australia Pty Ltd 1300 CENTOR mail@centor.com.au www.centor.com.au Centor Europe Ltd +44 (0)121 782 5400 mail@centoreurope.eu www.centoreurope.eu Centor North America Inc. toll free 866-255-0008 mail@centorarchitectural.com www.centorarchitectural.com



- Before starting any installation, ensure the head (lintel) is sufficiently strong and rigid to support the door in all positions. For head fix, the head must be square to the jambs and horizontally level.
- Fix track to the head allowing clearance for the height of the door and bottom guide.
- Remove track and wipe inside completely clean, failure to do this will
  effect the smooth operation of the door. Slide carrier assemblies and
  track stops into track where required and refit track to head.
- Fit carrier door plated to the top of the door, centre of door plate is to be approximately 50mm from each edge.
- Ensure the bottom of the door is grooved to accommodate the guide provided, alternative guide systems are available as accessories, if you do not wish to use a grooved door.
- Lift the door up to the track and engage the door plates on to the carrier adjusting bolts.
- Adjust carrier botls so that the door hangs plumb and tighten lock nuts to door plates.
- 8. Fit bottom guide.
- 9. Adjust track stops as required.
- Fit pelmets if required (not supplied). One of the pelmets should be removable to facilitate future servicing of the door.
- NB Maximum door weight 60kg.

#### ALUMINIUM TRACK

# 31 25 50

## 9TS TRACK STOP



- SET CONTAINS
- 1 x length of track
- 2 x A9 carriers 2 x 9TS track stops
- 1 x 1G nylon guide
- 1 x 1G nylon gu 1 x screw pack

#### CARRIER

#### Two versions of carrier available

- 94CCSM Stainless brackets.
   Plated bearings.
- 94CCSS Stainless brackets.
   Stainless bearings.



## PANEL CONFIGURATIONS



2 ways – 2 packs required



2 doors, 1 way - 2 packs required



## **GUIDES**


## TO FIT 1G GUIDE

## 1. Fit screw A

2. Rotate guide sideways to remove excess play, then fit screw B.



## 9FCA FLOOR GUIDE IN TIMBER

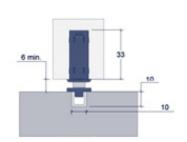


## Other channel options include:



960

# MWT4CA tile floor channel

## 1EG EXPANDING GUIDE ON WALL

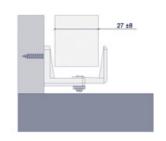

## 1G GROOVE GUIDE ON TIMBER FLOOR

## 1EGA EXPANDING GUIDE ON WALL

## 1GW GROOVE GUIDE ON WALL

## 1EG EXPANDING GUIDE ON TIMBER FLOOR

